



User Manual

Xcellent Series R-XC016161

A01 VERSION



○ E-mail: support@renonpower.com

○ Website: www.renonpower.com

Renon Power Technology Inc.

© Renon Power Technology Inc.

All Rights Reserved Specifications are subject to change without notice.



Renon Power

We Care About Sustainability

With our own R&D team and automated production factory, we are dedicated to delivering innovative, reliable, and affordable energy storage solutions to customers globally.

At Renon, we believe that sustainable energy is the future. We are passionate about reducing carbon emissions and preserving our planet for future generations. That's why we invest heavily in research and development, leveraging the latest technologies to design and manufacture energy storage systems that are efficient, scalable, and adaptable.

Our products are designed to meet the needs of a wide range of applications, from residential and commercial buildings to industrial facilities and utility-scale projects. Whether you're looking to reduce your energy bills, increase your energy independence, or support your sustainability goals, Renon has the right solution for you.

Our commitment to quality and customer satisfaction is unwavering. We work closely with our clients to understand their unique needs and provide customized solutions that meet or exceed their expectations. We also provide comprehensive technical support, maintenance, and warranty services to ensure that our customers get the most out of their investment.

JOIN US ON OUR MISSION TO MAKE RENEWABLE ENERGY WITHIN REACH.

**PROVIDE INNOVATIVE,
RELIABLE, AND
AFFORDABLE ENERGY
STORAGE SOLUTIONS
TO CUSTOMERS**



Table of contents

1 Safety Instructions.....	6
1.1 General Safety Precautions	6
1.2 Transportation and Storage Precautions.....	6
1.3 Installation Precautions.....	7
1.4 Usage Precautions.....	7
1.5 Response to Emergency Situations	8
1.6 Qualified Personnel	8
2 Installation and Usage.....	10
2.1 Safe Handling Guide	10
2.1.1 Familiarize Yourself with the Battery.....	10
2.1.2 Precautions before Installation	10
2.1.3 Tools	10
2.1.4 Safety Gear	11
2.2 System Premeasurement	11
2.3 Installation Location	11
2.4 Package Items.....	12
3 Installation.....	14
3.1 Device Installation	14
3.2 Connection	18
3.3 Power on	20
3.4 Parallel Connection (Optional)	22
3.4.1 Single Stack	22
3.4.2 Multiple Batteries.....	23
4 Cloud Platform Configuration.....	24
5 Battery Specifications.....	32
5.1 Product Features	32
5.2 Specifications	33
5.3 LED and Power Button	34

5.3.1 Power Button	34
5.3.2 LED	35
5.4 Function Introduction	36
5.4.1 Protection.....	36
5.4.2 Heating.....	36
5.4.3 Forced Discharge.....	36
5.4.4 Full Charge.....	36
5.4.5 Charging Self-Adaptation Control.....	36
5.4.6 Safety Lock	36
5.5 Interface Information	37
5.5.1 On/Off	37
5.5.2 LINK IN Parallel Communication Port.....	38
5.5.3 LINK OUT Parallel Communication Port	38
5.5.4 Inverter Communication Port (RJ45).....	39
5.5.5 Debug Port	40
5.5.6 Inverter Dial Switch	40
5.5.7 Function Dial Switch.....	42
5.5.8 Address Dial Switch	42
5.5.9 Debug Port (connector).....	43
5.5.10 Inverter Communication Port (connector).....	44
5.5.11 Dry Contact	44
5.5.12 Power Positive & Negative	45
5.5.13 Dial Code Switch.....	45
6 Troubleshooting & Maintenance	48
6.1 Regular Maintenance	48
6.2 Troubleshooting	48
6.3 Status Codes.....	49
6.3.1 Alarm Codes	49
6.3.2 Error Codes.....	51

6.3.3 Protection Codes..... 53

1 Safety Instructions

For safety reasons, installer and user are responsible for familiarizing themselves with the contents of this document and all warnings before installation and usage.

1.1 General Safety Precautions

- ⑩ Please carefully read this manual before any work is carried out on the product, and keep it located near the product for future reference.
- ⑩ All installation and operation must comply with local electrical standards.
- ⑩ Please ensure the electrical parameters of the product are compatible to related equipment.
- ⑩ Do not open or dismantle the battery module. Electrolyte is very corrosive. In normal working conditions contact with the electrolyte is impossible. If the battery casing is damaged, do not touch the exposed electrolyte or powder because it is corrosive.
- ⑩ The electronics inside the product are vulnerable to electrostatic discharge.
- ⑩ Do not place items or tools on the product.
- ⑩ Do not damage the product by dropping, deforming, impacting, or cutting.
- ⑩ Keep the product away from liquid. Do not touch the product if liquid spills on it. There is a risk of electric shock.
- ⑩ Do not expose the product to flammable or harsh chemicals or vapors.
- ⑩ Do not paint any part of the product, include any internal or external components.
- ⑩ Do not change any part of the product, especially the battery and cell.
- ⑩ Besides connection under this manual, any other foreign object is prohibited from being inserted into any part of the product.
- ⑩ The warranty claims are excluded for direct or indirect damage due to items above.
- ⑩ Batteries must not be mixed with domestic or industrial waste.
- ⑩ Batteries marked with the recycling symbol must be processed via a recognized recycling agency. By agreement, they may be returned to the manufacturer.

1.2 Transportation and Storage Precautions

- ⑩ The batteries must be transported according to UN3480, they must be packed according to packaging requirements of Special Regulation 230 of IMDG CODE (40-20 Edition) for maritime transport, and P965 IA for air transport (SOC less than 30%). The original packaging complies with these instructions.
- ⑩ If the product needs to be moved or repaired, the power must be cut off and completely shut down.
- ⑩ The product must be transported in its original or equivalent package;

- ⑩ The modules are heavy. Ensure adequate and secure mounting and always use suitable handling equipment for transportation.
- ⑩ If the product is in its package, use soft slings to avoid damage.
- ⑩ Do not stand below the product when it is hoisted.
- ⑩ During transportation, severe impact, extrusion, direct sunlight, and rain should be avoided.
- ⑩ Store in a cool and dry place.
- ⑩ Store the product in clean environment, free of dust, dirt and debris.
- ⑩ Store the product out of reach of children and animals.
- ⑩ Don't store the battery under 50% SOC for over one month. This may result in permanent damage to the battery and void the warranty.
- ⑩ During long term storage, it is required to charge the battery module every 3 months, and the SOC should be no less than 90%.

1.3 Installation Precautions

- ⑩ Do not install the product in an airtight enclosure or in an area without ventilation.
- ⑩ Do not install the product in living areas of dwelling units or in sleeping units other than within utility closets and storage or utility spaces.
- ⑩ If the product is installed in a garage or carport, ensure there is adequate clearance from vehicles.
- ⑩ While working on the product wear protective eyeglasses and clothing.
- ⑩ Handle the battery wearing insulated gloves.
- ⑩ Use insulated tools. Do not wear any metallic items such as watches, bracelets, etc.
- ⑩ Turn-off related circuit breakers before and during the installation to avoid electric shock.
- ⑩ Do not connect any AC conductors or photovoltaic conductors directly to the battery pack. These are only to be connected to the inverter.
- ⑩ Wiring must be correct, do not mistake the positive and negative cables, and ensure no short circuit with the external device.
- ⑩ Over-voltages or wrong wiring could damage the battery pack and cause combustion which can be extremely dangerous.
- ⑩ Make sure the product is well grounded, and complies with local specifications. The recommended grounding resistance is less than 1Ω .
- ⑩ Handle with care because Li-ion Battery is sensitive to mechanical shock.

1.4 Usage Precautions

- ⑩ Before starting the system, the operator should strictly check the connection terminals to ensure that the terminals are firmly connected.
- ⑩ If there's a circuit breaker between battery and inverter, the breaker is supposed to be on before powering on the battery.

- ⑩ Do not open the product, connect, or disconnect any wires when it's working to avoid electric shock.
- ⑩ Battery needs to be recharged within 12 hours after fully discharging.
- ⑩ The default temperature range over which the battery can be discharged is -4°F (-20°C) to 122°F (50°C). Frequently discharging the battery in high or low temperature may deteriorate the performance and life of the battery pack.
- ⑩ The default temperature range over which the battery can be charged is 32°F (0°C) to 122°F (50°C). Frequently charging the battery in high or low temperature may deteriorate the performance and life of the battery pack.
- ⑩ Do not charge or discharge a damaged battery.
- ⑩ Please contact the supplier within 24 hours if there is something abnormal.

1.5 Response to Emergency Situations

- ⑩ Damaged batteries are dangerous and must be handled with extreme care. They are not suitable for use and may cause danger to people or property. If the battery pack appears to be damaged, place it in the original container and return it to an authorized dealer.
- ⑩ If the battery pack is wet or submerged in water, do not allow anyone to touch the water, and then contact authorized dealer for technical support.
- ⑩ In case of fire, use carbon dioxide, FM-200 or ABC dry powder fire extinguisher; if possible, move the battery pack to a safe area before it catches fire.
- ⑩ If a user happens to be exposed to the internal materials of the battery cell due to damage on the outer casing, the following actions are recommended.
- ⑩ In case of inhalation: Leave the contaminated area immediately and seek medical attention.
- ⑩ In case of contact with eyes: Rinse eyes with running water for 15 minutes and seek medical attention.
- ⑩ In case of contact with skin: Wash the contacted area with soap thoroughly and seek medical attention.
- ⑩ In case of ingestion: Induce vomiting and seek medical attention.

1.6 Qualified Personnel

The installation guide part described herein is intended for use by skilled staff only. Skilled staff is defined as a trained and qualified electrician or installer who has all the following skills and experience:

- ⑩ Knowledge of battery specification and properties.
- ⑩ Knowledge of the installation of electrical devices.
- ⑩ Knowledge of torsion and screwdrivers for different types of screws.
- ⑩ Knowledge of local installation standards.
- ⑩ Electrical license for battery installation required by the country or state.
- ⑩ Knowledge of the dangers and risks associated with installing and using electrical devices and acceptable mitigation methods.

- ⑩ Knowledge of and adherence to this guide and all safety precautions and best practices.
- ⑩ For safety reasons, installers are responsible for familiarizing themselves with the contents of this document and all warnings before performing installation and usage.

2 Installation and Usage

2.1 Safe Handling Guide

2.1.1 Familiarize Yourself with the Battery


Be careful when unpacking the system. Every module of the product is heavy. Don't lift them with a pole. The weight of the modules can be found in the chapter "**Specifications**".

2.1.2 Precautions before Installation

Before installation, be sure to read the contents in chapter "**Safety Precautions**", which is related to the operation safety of installation personnel, please pay attention to it.

2.1.3 Tools


The following tools are required to install the product:

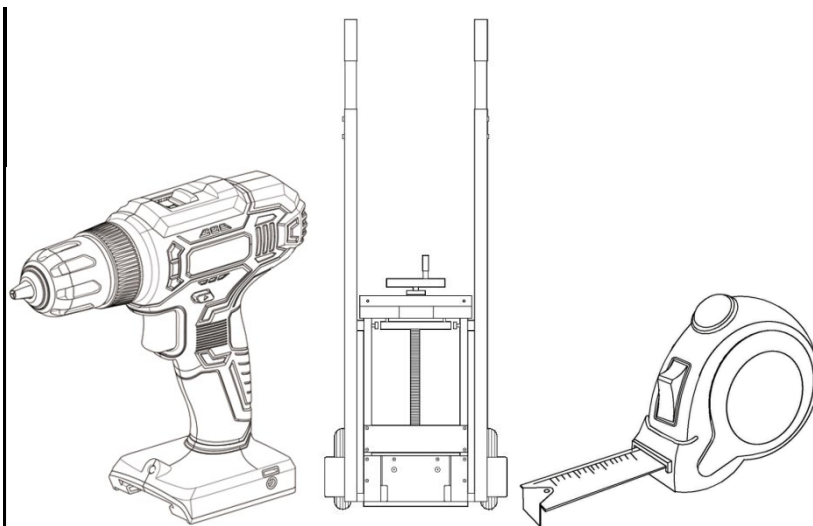


Cordless Drill

Dolly


Measuring Tap

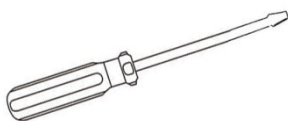


Flathead Screwdriver

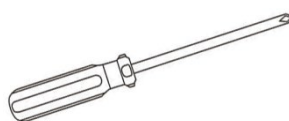


Phillips Screwdriver

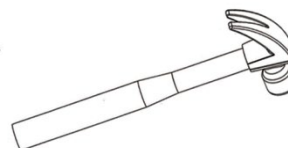


Hammer

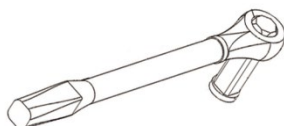

Torque Wrench



Hydraulic Clamp

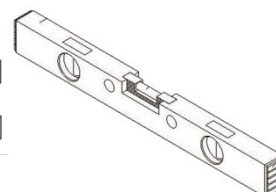

Spirit Level


Use properly insulated tools to prevent accidental electric shock or short circuits. If insulated tools are not available, cover the exposed metal surfaces of the available tools, except their tips, with electrical tape.

2.1.4 Safety Gear

It is recommended to wear the following safety gear when dealing with the product:



Insulated Gloves

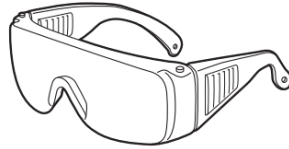

Safety Goggles



Safety Shoes

2.2 System Premeasurement

The battery requires adequate clearance for installation and airflow. The minimum clearance for system configuration is given below. The cable connected between battery pack and inverter should be in accordance with the installation guide or manual of the inverter.

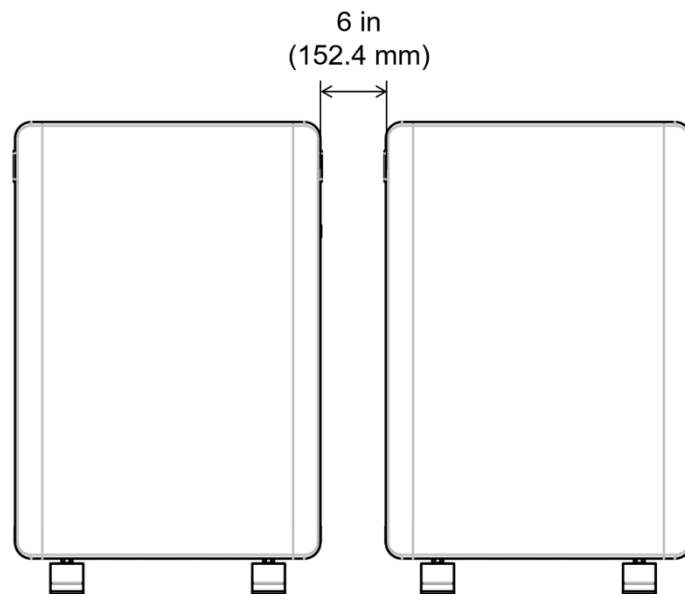


Figure 2.2.1 Minimum clearance

2.3 Installation Location

Make sure that the installation location meets the following conditions:










- ⑩ The surface of the wall is smooth and perpendicular to the ground, which can bear the weight.
- ⑩ The site condition is completely water proof.
- ⑩ The site condition shall avoid direct sunlight.
- ⑩ There site condition no flammable or explosive materials.
- ⑩ The distance from heat source is more than 80 in (2m).
- ⑩ The ambient temperature is within the range from 32°F(0°C) to 95°F(35°C).






- ⑩ The humidity is maintained below 60%.
- ⑩ There is minimal dust and dirt in the site condition.
- ⑩ Avoid installation in site condition confined or with high salinity.
- ⑩ Do not install outside directly for prevent severe weather.
- ⑩ Do not place in site condition accessible to children or pets.

2.4 Package Items

After receiving the product, please unpack the boxes, and check product and packing list first. If product is damaged or lacks parts, please contact the local retailer.

Here is the Xcellent Series R-XC016161 Packing List:

No.	Item	Specification	Qty	Usage	Diagram
1	Xcellent Series R-XC016161	R-XC016161(-H)	1	Battery	
2	Mounting Panel	15*3*0.5 in/ 508*215*20 mm	1	Mounting battery on the wall	
3	Embedded Screw	M8*80	6	Fix battery on the wall	
4	Embedded Screw	M6*16	16	Fix truckle on the trundle	
5	Embedded Screw	M5*12	1	Fix mounting panel on the wall and connect grounding	
6	Power Cable-Positive (customizable)	SC70-8 to SC70-8, 66.93 in (1.7m), red	1	Connects positive of battery to inverter	
7	Power Cable-Negative (customizable)	SC70-8 to SC70-8, 66.93 in (1.7m), black	1	Connects negative of battery to inverter	
8	Communication Cable	CAT6, 16awg, 80 in (2m), black	1	Communications for parallel	
9	Universal Wheel	2.5 in	2	Fix truckle on the bottom	

10	Directional Wheel	2.5 in	2	Fix truckle on the bottom	
11	Leveling feet	Ø60-M10-95	4	Connects panel bottom	
12	Pin order selection box (optional)	3.3*1.0*0.9 in /85*26*22 mm	1	Set the pin order of the communication cable of battery and inverter, cooperate with 2 standard network cable	
13	Inverter Communication Cable (Optional)	Standard RJ45 network cable, 2000mm*1, 200mm*1	2	Connects the communication pole of battery and inverter	
14	User manual	Xcellent Series R-XC016161	1	User manual	

3 Installation

3.1 Device Installation

The location of the installation must be uninhabitable.

Method 1: On the wall

- 1) Make sure whether the wall can support the weight of the device.
- 2) Find a appropriate installation position as the diagram below, drill the mounting screws, and install the bracket on the wall.

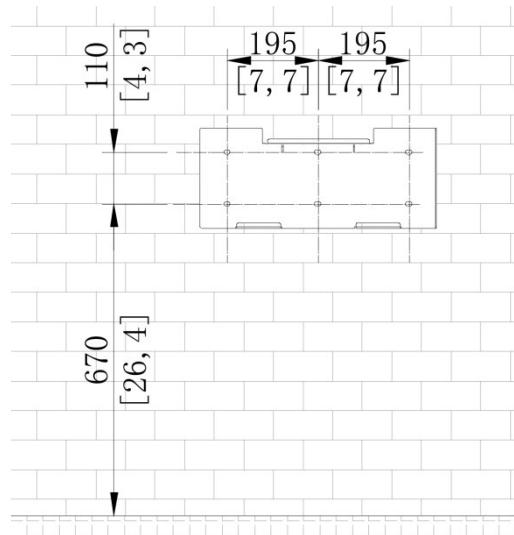


Figure 3.1.1 Mounting panel dimension on the wall

- 3) Fix the product on the bracket to ensure that the wall hanging is stable and perpendicular to the wall.

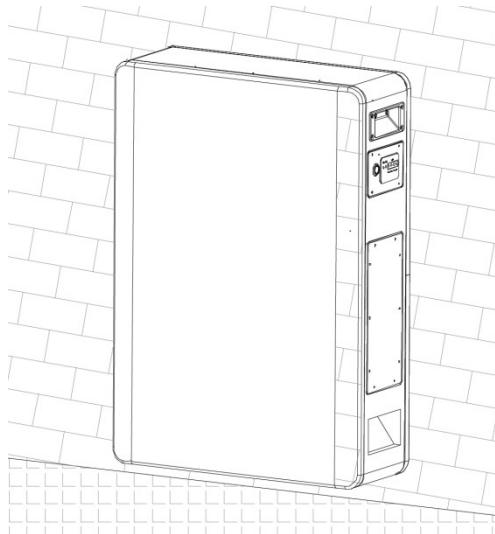


Figure 3.1.2 Put Xcellent Series R-XC016161 on the mounting panel

- 4) Secure the screw to grounding cable hole and grounding, using M5 screws to secure the device and bracket.
- 5) Please plug the protective ring of the outlet line with fireproof mud after installing.

Method 2: On the ground

- 1) Make sure whether the wall can support the weight of the device.
- 2) Find a appropriate installation position as the picture below, drill the mounting screws, and install the bracket on the wall.

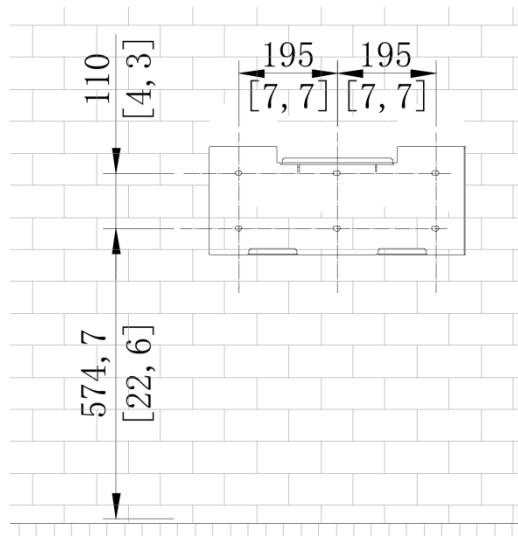


Figure 3.1.3 Device grounding installation dimension

- 3) Fix the product on the bracket to ensure that the wall hanging is stable and perpendicular to the wall.

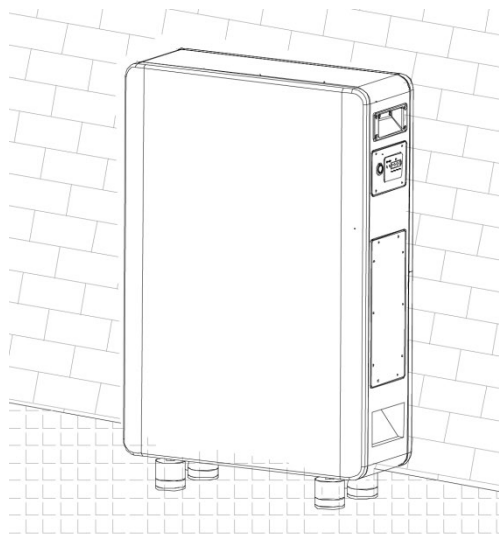


Figure 3.1.4 Fix leveling feet on the ground

- 4) Secure the screw to grounding cable hole and grounding, using M5 screws to secure the device and bracket.
- 5) Rotate the leveling feet to the right and mount it to the bottom plate.
- 6) Adjust the appropriate position as the following diagram.
- 7) Please plug the protective ring of the outlet line with fireproof mud after installing.

Method 3: Removable

- 1) Make sure whether the wall can support the weight of the device.
- 2) Find an appropriate installation position as the diagram below, drill the mounting screws, and install the bracket on the wall.

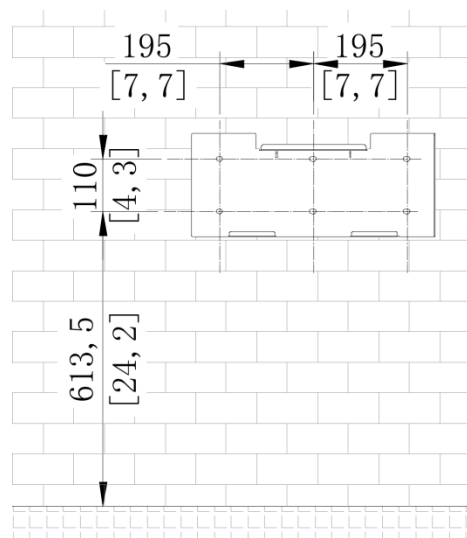


Figure 3.1.5 Device standing installation dimension

- 3) Move the device in an appropriate position. Do not back and forth when you move the device for prevent device dumping.

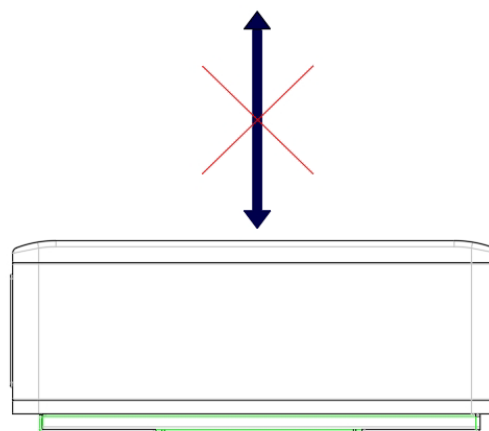


Figure 3.1.6 Device moving direction

4) Fix the product on the bracket to ensure that the wall hanging is stable and perpendicular to the wall.

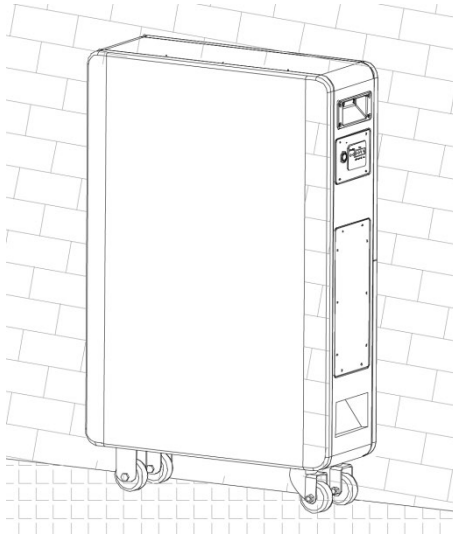


Figure 3.1.7 Device standing

5) Secure the screw to grounding cable hole and grounding, using M5 screws to secure the device and bracket.

6) What you need to pay attention is that the left is the directional wheel and the right is the universal wheel.

7) Please plug the protective ring of the outlet line with fireproof mud after installing.

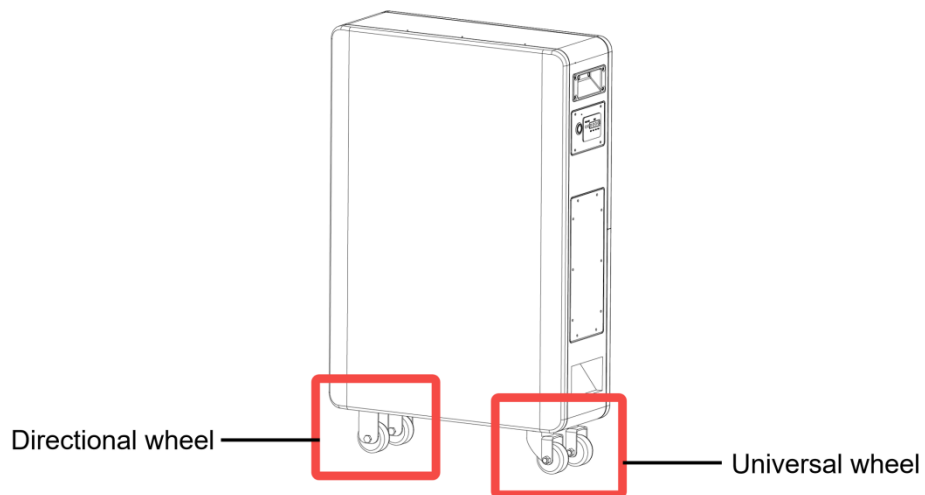


Figure 3.1.8 Installation location

3.2 Connection

1) Remove the side panel.

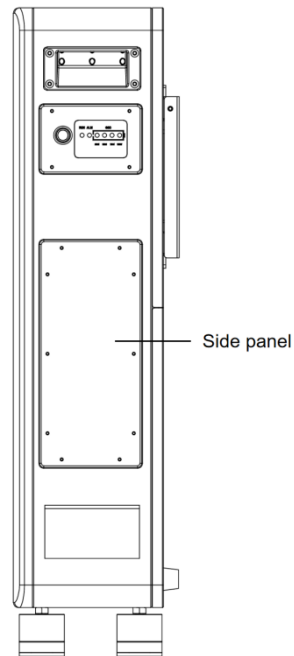


Figure 3.2.1 Side view of Xcellent Series R-XC016161

2) Connect to inverter's negative and positive terminals.

Terminal type: SC70-8

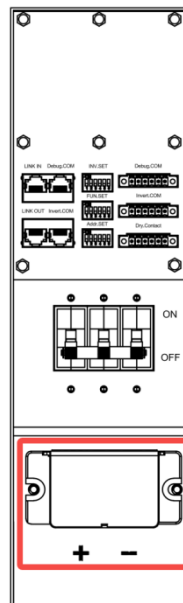


Figure 3.2.2 Power wire connection

3) Communication cable connection

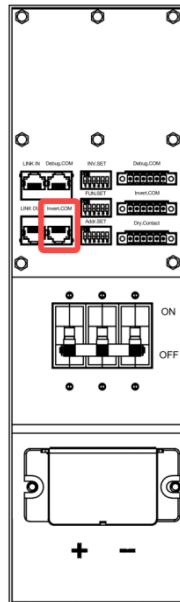


Figure 3.2.3 Communication cable connection

4) Dial code setting

Step 1: Please refer to the 5.5.6 Inverter Dial Switch for inverter configuration.

Step 2: Please refer to the 5.5.7 Function Dial Switch for function configuration.

Step 3: Please refer to the 5.5.8 Address Dial Switch for address configuration.

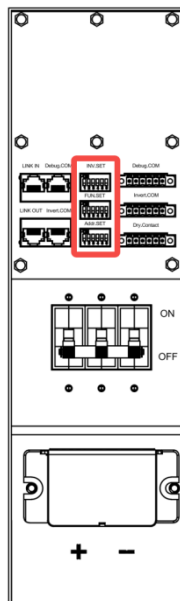


Figure 3.2.4 Dial code setting

5) Put side panel back and screw it firmly.

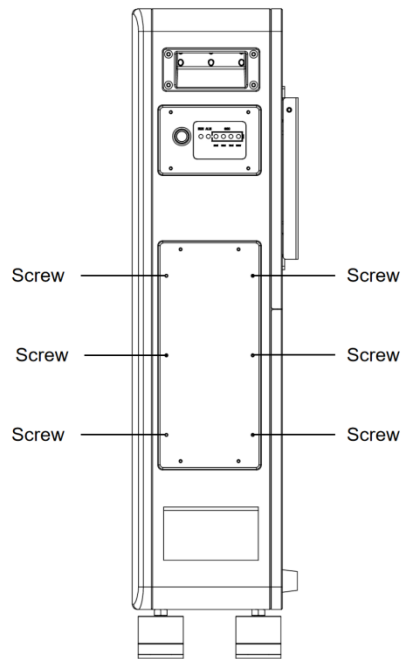


Figure 3.2.5 Mount back the side panel

3.3 Power on

- 1) Turn on the switch of inverter.
- 2) Turn on the switch of battery.

Note: Before powering on, set the battery address dial switch to position 1.

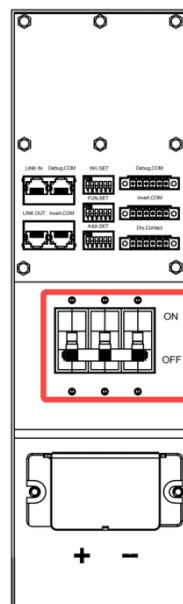


Figure 3.3.1 Battery switch

3) Press the power button of battery.

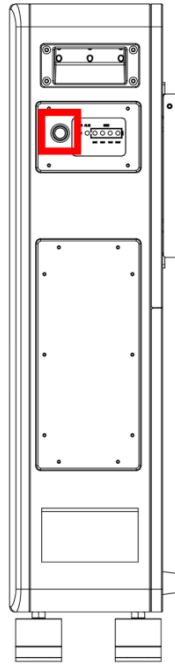


Figure 3.3.2 Power button

3.4 Parallel Connection (Optional)

3.4.1 Single Stack

Step 1: Setting the dial code of Addr SET, INV.SET, and FUN SET.

- 1) Please refer to the 5.5.5 Function Dial Switch for function configuration.
- 2) Please refer to the 5.5.6 Inverter Dial Switch for inverter configuration.
- 3) Please refer to the 5.5.7 Address Dial Switch for address configuration.

Step 2: Connect battery INV.COM. to inverter CANBus port.

Step 3: Connect the positive and negative terminal of the battery to the positive and negative terminal of the inverter using a SC70-8 power cable.

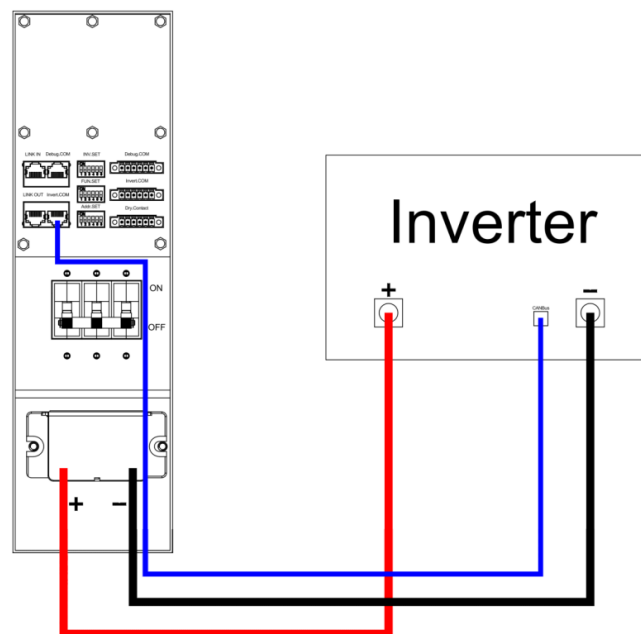


Figure 3.4.1 Single stack

Example: Connect with Deye inverter.

	Address	Inverter	Function
Battery			

3.4.2 Multiple Batteries

Step 1: Setting the dial code of Addr SET, INV.SET, and FUN SET.

Step 2: Connect LINK OUT of the master battery to LINK IN of the slave 1, and then connect Link OUT of slave 1 to Link IN of slave 2, and so on.

Step 3: Connect battery INV.COM. to inverter CANBus port.

Step 4: Connect the positive and negative terminal of the slave to the positive and negative terminal of the master, and then connect the power cables positive and negative terminal of the inverter port.

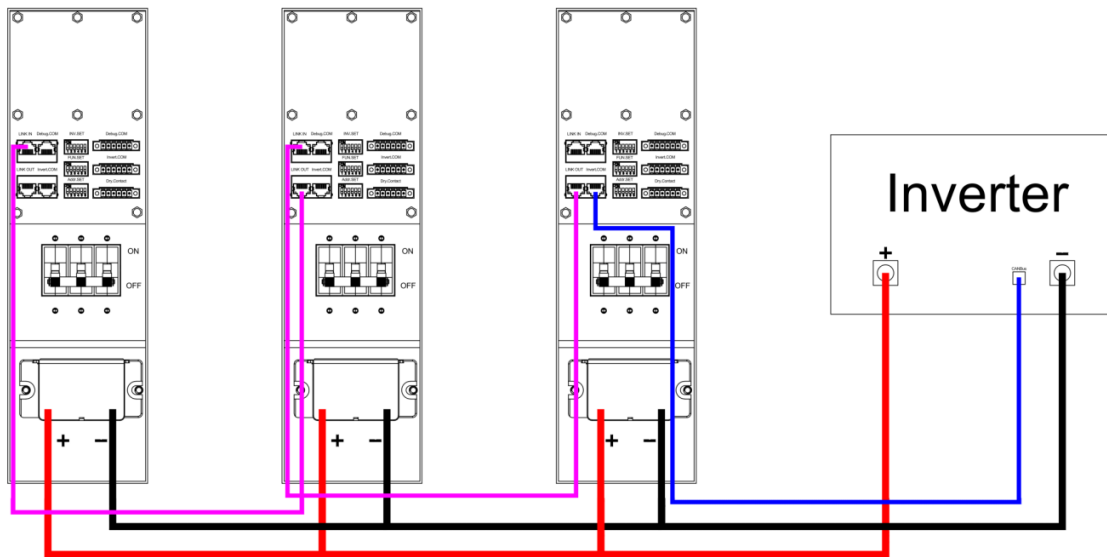


Figure 3.4.2 Multiple batteries in parallel

Example: Connect with Deye inverter.

	Address	Inverter	Function
First			
Middle			
Last			

4 Cloud Platform Configuration

1) Download App

Download and install Renon app from Google play or App Store by searching “Renon Smart”.

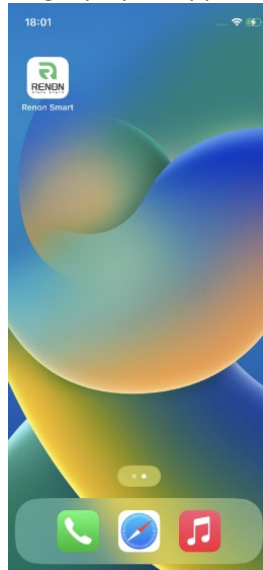


Figure 4.1.1. Install Renon App



Figure 4.1.2. Android QR code



Figure 4.1.3. IOS QR code



2) Register

For new account registration, please retrieve the Registration Code from your installer. Existing users may log in directly, while new users must create an account.

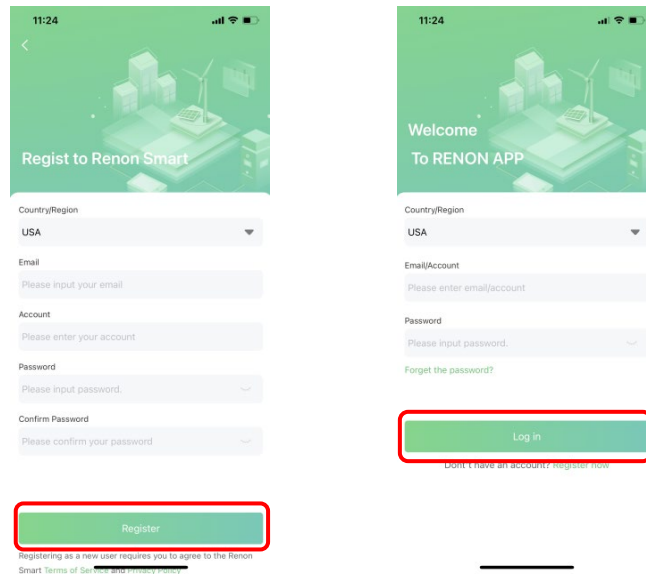


Figure 4.1.4. Register &Log in

3) Log in

This is a general user account.

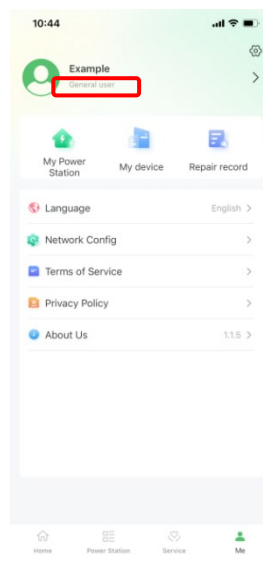


Figure 4.1.5. General user

4) Binding

Method 1:

a. Distribution

To register as an end user, scan the binding QR code provided by your installer, then request device assignment to your account.

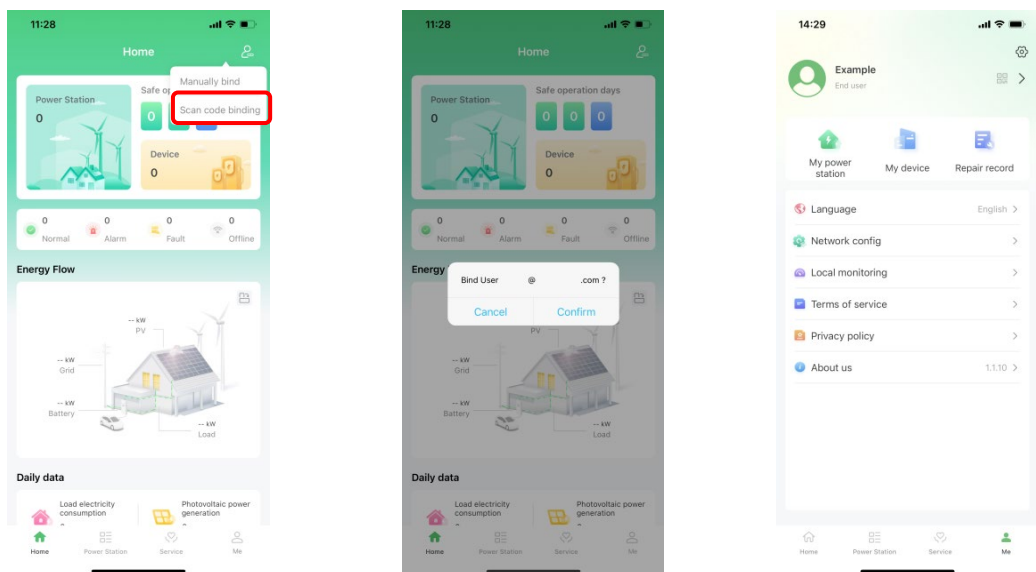


Figure 4.1.6. Scan upper-level account, Confirm binding & Become end user

b. Scan QR code

Select "Scan code binding" and scan the QR code using your device camera. Contact the installer if unsuccessful.

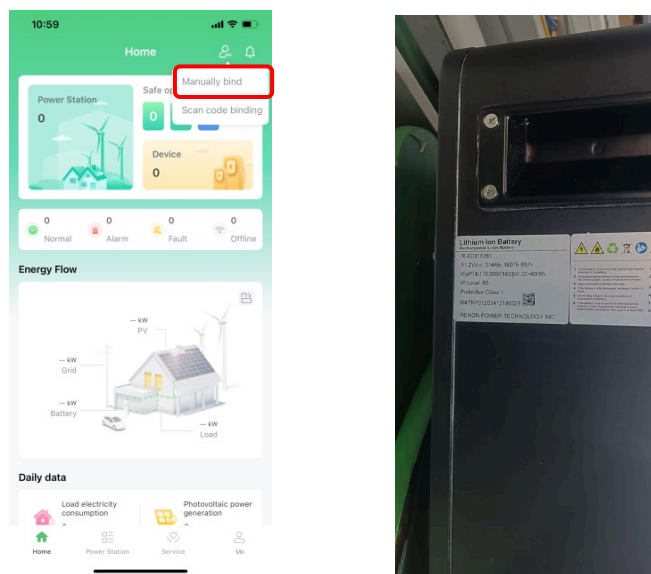


Figure 4.1.7. Scanning QR code

Method 2:

Click "My device" to enter the "Add a device" page, scan the QR code as illustrated, then select a upper-level account to complete binding.

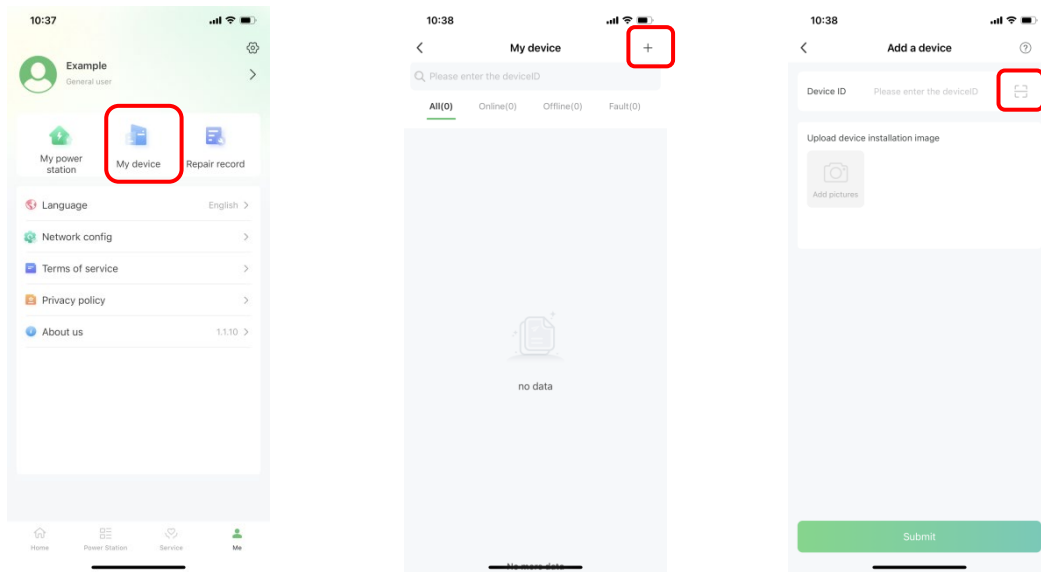


Figure 4.1.8. My device, add & scanning

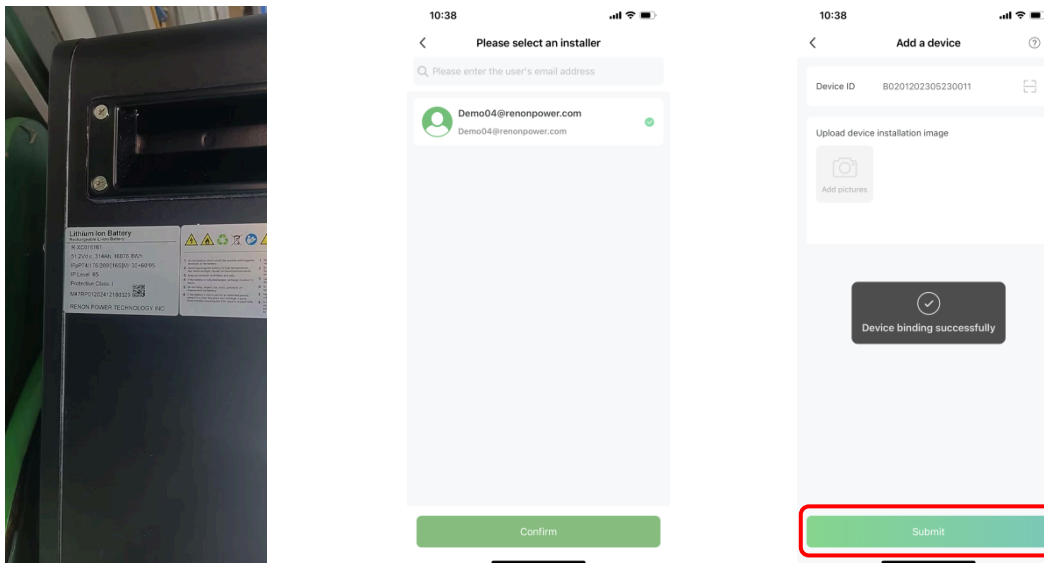



Figure 4.1.9. QR code, upper-level account & binding successfully

If the above methods are not successful, please contact Renon, email address: support@renon-usa.com, Renon Power Support: +1 (833) 736-6687. Be sure to write your account name/email address and device serial number clearly.

5) WiFi configuration

Set the inverter dial code to 63 (111111) as shown below before WiFi configuration.

Note: In a system with multiple batteries operating in parallel, you only need to configure the master battery unit (set to Address 1). Once configured, all other units will automatically retrieve network settings and connect seamlessly without manual intervention.

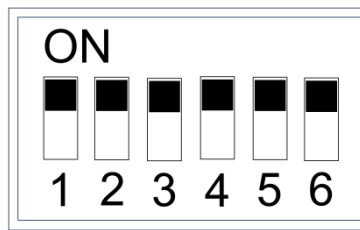

Turn to the “Me” page, click Network Configuration, then click Bluetooth, followed by WiFi configuration.

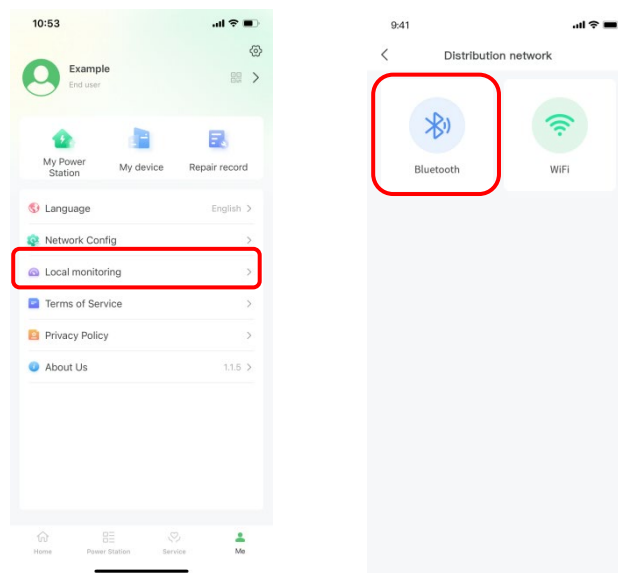


Figure 4.1.10. Bluetooth network setting

Enable Bluetooth on your mobile device, then select the detected device to access its Bluetooth network configuration page

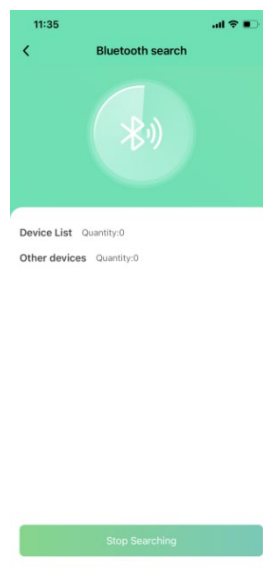


Figure 4.1.11. Connect battery Bluetooth

Enter your private WiFi credentials (SSID and password) to connect the master controller.

Note: Devices assigned to end users will auto-populate the authentication key.

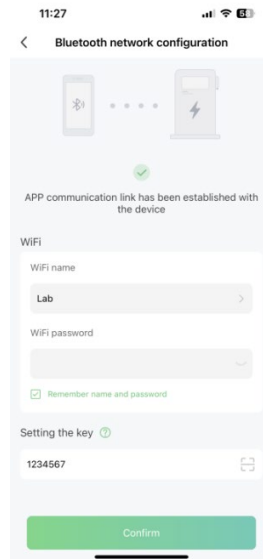


Figure 4.1.12. Connecting private WiFi

6) Create a power station

Navigate to the Power Station page on the app, create a new station by setting its name, type, pricing, superior view, address, and uploading station images.

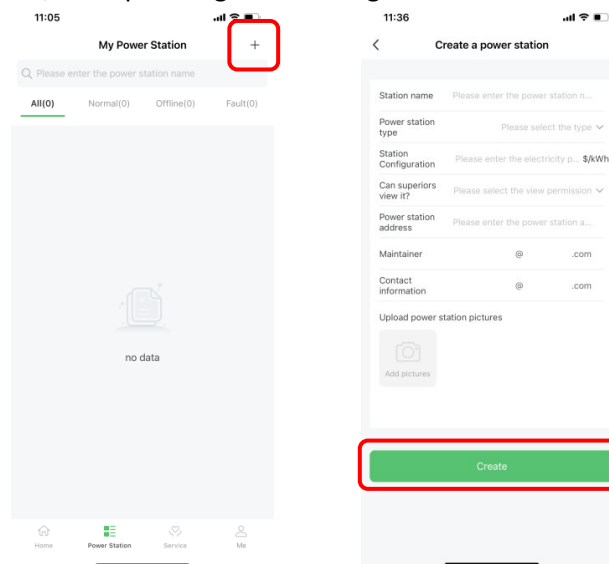


Figure 4.1.13. Create a new power station

After successful power station creation, select the newly created station to view its details, then tap "+" on the Binding Device page to add your desired device.

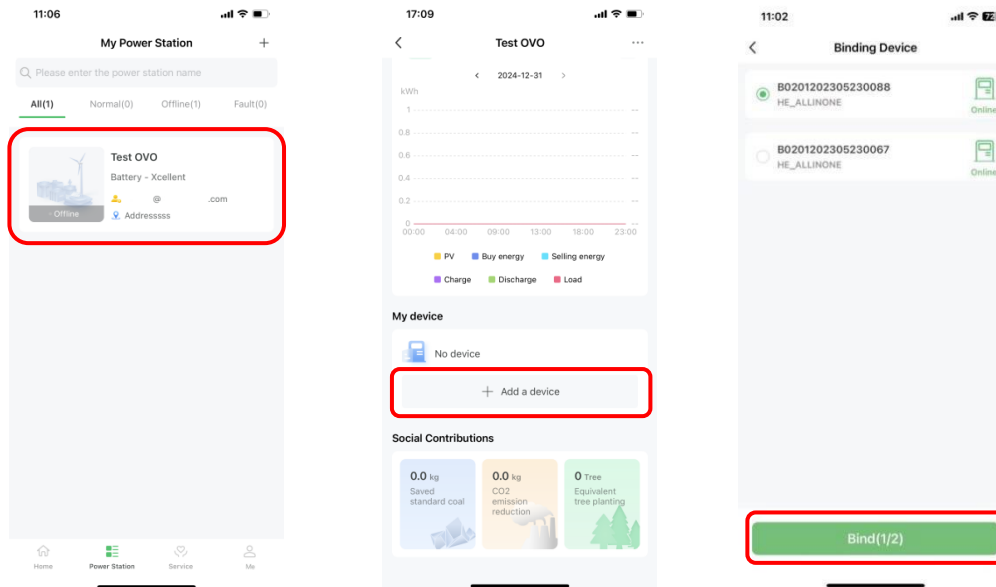


Figure 4.1.14. Manage your power station & Confirm your device

The device can be managed both through the app and the web portal (contact your installer for the website URL).

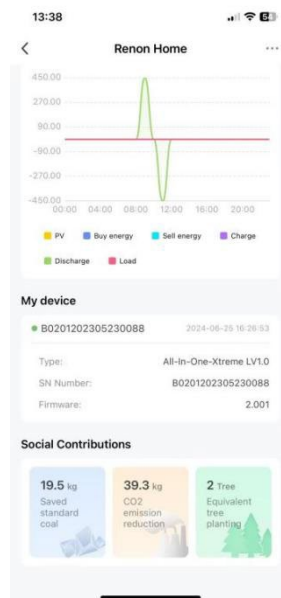


Figure 4.1.15. Manage your device

Once WiFi connected, the device enables real-time monitoring of operational status, instantaneous power, and energy consumption (daily/cumulative) via the network platform or mobile app, while also supporting remote parameter configuration.

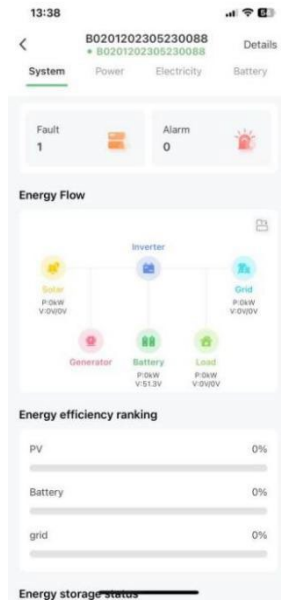


Figure 4.1.16. Monitoring device

Set the inverter dial code to match the inverter brand after WiFi configuration is complete (Please refer to the chapter **5.5.6 Inverter Dial Switch**).

5 Battery Specifications

The Xcellent Series R-XC016161 is a lithium iron phosphate (LFP) battery-based energy storage product developed and produced by RENON, it can supply reliable power for nearly all kinds of household appliances and equipment.

The Xcellent Series R-XC016161 consists of a built-in BMS battery management system, which can manage and monitor cells information including voltage, current and temperature, used to limit the balance current between different batteries when parallel use to expand capacity and power to meet the requirements of longer power supporting duration and higher power consumption.

It is suspended on the wall in daily usage.

5.1 Product Features

- ⑩ With a DC-DC converter inside, users can extend or change battery modules whenever they want, no need to consider the quality or SOC of old modules.
- ⑩ The whole product is non-toxic, pollution-free and environment-friendly.
- ⑩ Cathode material is made from LiFePO₄ with safety, performance, and a long cycle life.
- ⑩ The battery is small in volume, has light weight, plug-in embedded design module, and is easy to install and maintain.
- ⑩ Working temperature range is from -4°F and 122°F (-20°C to 50°C) with excellent discharge performance and cycle life.
- ⑩ The battery management system (BMS) has protection functions including over-discharge, over-charge, over-current, and high/low temperature.
- ⑩ The battery can self-discharge, up to 3 months without and offer excellent performance of shallow charge and discharge.
- ⑩ The system can automatically manage battery charge and discharge state and save energy costs with various automation options.

5.2 Specifications

Item	R-XC016161 / R-XC016161-H
Battery Chemistry	LiFePO4
Nominal Energy (kWh)	16
Nominal Capacity (Ah)	314
Max. Charging/Discharging Current (A)	190
Nominal Voltage (V)	51.2
Recommend Charging Voltage (V)	56.8
Max. Charging Voltage (V)	58.4
Discharge Cut-off Voltage (V)	43.2
Heating Power(W)	130
Heating Start Temperature (°F/°C)	41/5 (-H model only)
Operation Temperature(°F/°C)	Discharge: -4~131 / -20~55 Charge: 32~131 / 0~55
Safety Function	Over-charge, Over-discharge, Over-current, Low/High-temperature, Short-circuit Protections
Parallel	Maximum 15
Communication	RS485/CAN/RS232
Weight (lbs/kg) (Approx.)	278/126
Physical Dimensions (in/mm) (W*D*H)	22*7.8*31.5/560*200*800 (±2) (Leveling feet not included)
Level of Protection	IP65
Altitude	≤4000m

Note: -H indicates that this product contains a heating film and has a heating film function.

5.3 LED and Power Button

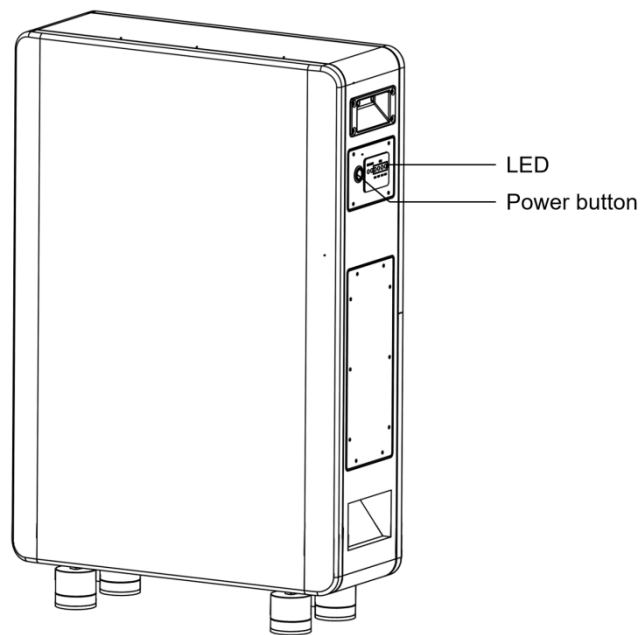


Figure 5.3.1 LED and power button

5.3.1 Power Button

The power button is used to power-on/power-off the device.

The power button is located in right corner of device.

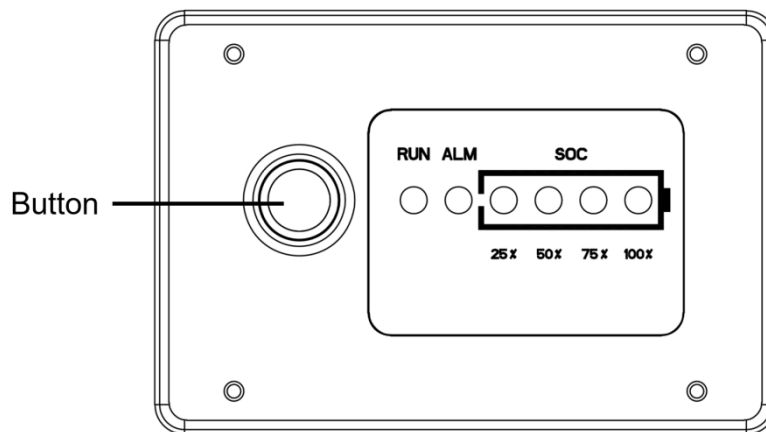


Figure 5.3.2 Power button

5.3.2 LED

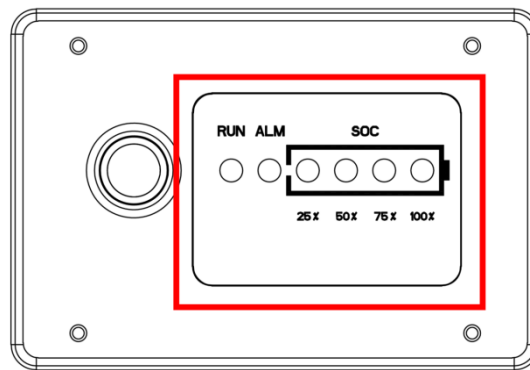


Figure 5.3.3 LED

The LEDs are used to display current state.

The LEDs are located on the right side of device.

No.	Item	Specification								
1	RUN (Blue)	Shut down: Off								
		WiFi disconnect router: On								
		WiFi has connected router: 0.5s on, 0.5s off								
		WiFi has connected cloud: 0.5s on, 1.5s off								
2	Alarm (Red)	No protection, alarm, fault: Off								
		Alarm: 0.5s on, 1.5s off								
		Protection: 0.5s on, 0.5s off								
		Fault: On								
3	Fault (Green)		Charge				Discharge			
		LED SOC (%)	SOC - 25%	SOC - 50%	SOC - 75%	SOC - 100%	SOC - 25%	SOC - 50%	SOC - 75%	SOC - 100%
		SOC = 0%	Flash 1	Off	Off	Off	Off	Off	Off	Off
		0< SOC≤ 25%	Flash 1	Off	Off	Off	On	Off	Off	Off
		25< SOC≤ 50%	On	Flash 1	Off	Off	On	On	Off	Off
		50< SOC≤ 75%	On	On	Flash 1	Off	On	On	On	Off
		75< SOC≤ 100%	On	On	On	Flash 1	On	On	On	On

*Flash 1: 0.5s on, 0.5s off

5.4 Function Introduction

5.4.1 Protection

The battery system is equipped with comprehensive protection features, including but not limited to overcharge/overdischarge protection, high/low temperature protection during charging/discharging, overcurrent protection during charging/discharging, and short circuit protection, ensuring the safety and stability of the battery under various usage conditions.

5.4.2 Heating

When the battery is equipped with a heating film, the system monitors cell temperature in real time. If the minimum cell temperature drops below 5°C while the charging current exceeds 3A, the system automatically activates heating to optimize performance. The heating function requires the inverter to be connected to the grid for continuous operation; otherwise, heating will only operate for 1 minute. Once the minimum cell temperature exceeds 15°C, the heating function will automatically deactivate to prevent overheating.

5.4.3 Forced Discharge

When the system enters sleep mode due to undervoltage, users can manually activate the forced discharge mode by pressing the power button. Additionally, the system will automatically wake up at scheduled intervals to enter forced discharge mode, thereby activating the charger or inverter (the inverter requires grid connection) to provide necessary supplemental charging to the battery, ensuring its continued availability.

5.4.4 Full Charge

To ensure long-term battery health, the system monitors the battery's charging status. If the system detects that the battery has not reached a full charge for 30 consecutive days, it will automatically initiate a full charge process, charging the battery to its maximum capacity to maintain optimal performance.

5.4.5 Charging Self-Adaptation Control

The system will automatically reduce charging power when the battery is in low/high temperature conditions or low/high SOC.

5.4.6 Safety Lock

This device is equipped with a safety lock function. If the lock is triggered and cannot be resolved after self-attempts, promptly contact technical support personnel for unlocking assistance.

5.5 Interface Information

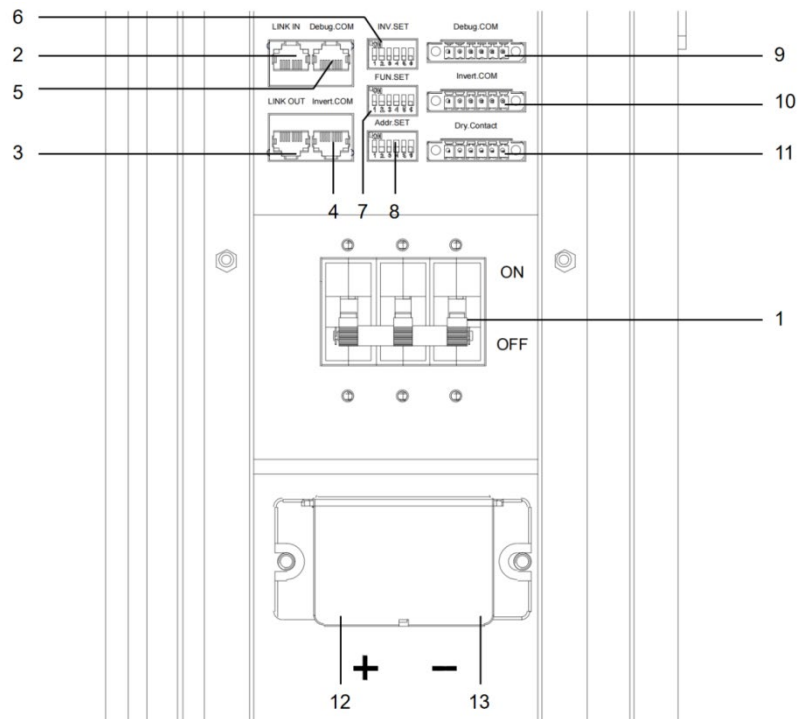


Figure 5.5.1 Battery ports

No.	Instructions	No.	Instructions
1	On/Off	8	Addr.SET
2	LINK IN	9	Debug COM
3	LINK OUT	10	Inverter COM
4	Inverter COM	11	Dry Contact
5	Debug COM	12	Power Positive
6	INV.SET	13	Power Negative
7	FUN.SET		

5.5.1 On/Off

The power button is at the bottom of the left side of the battery, press it once to power on the battery, and press it again to power off.

On/Off is connected with inverter terminal box as the below.

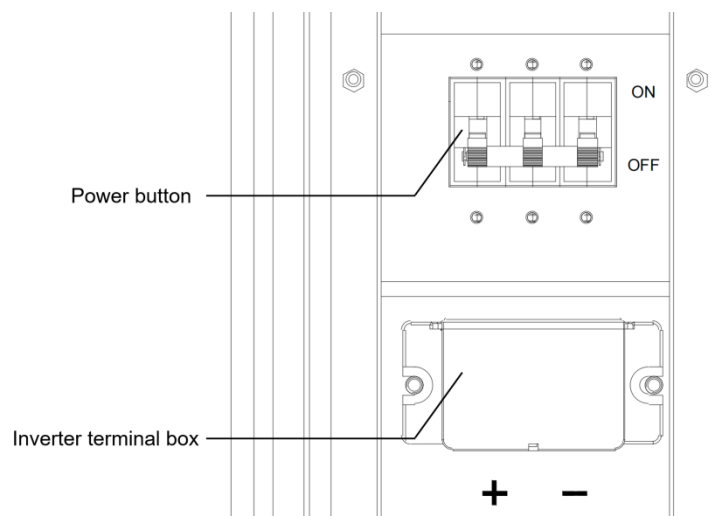
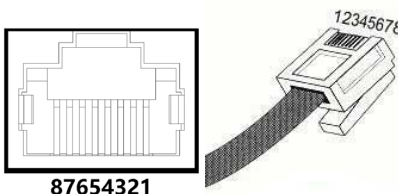


Figure 5.5.2 On/Off introduction

5.5.2 LINK IN Parallel Communication Port

Terminal type: RJ45

Usage: Communicates with the last battery when parallel used.


Port definitions	RJ45 Pin	Function
 <p>87654321</p>	1	BMS_CAN1L
	2	BMS_CAN1H
	3	BMS_CC_GND
	4	BMS_CC_GND
	5	BMS_PW_IN1
	6	BMS_CC_GND
	7	BMS_XUNZIN-
	8	BMS_XUNZIN+

One switch power on and Automatic address configuration functions are disabled by default, contact us for support if you need these functions.

5.5.3 LINK OUT Parallel Communication Port

Terminal type: RJ45

Usage: Communicates with the next battery when parallel used.

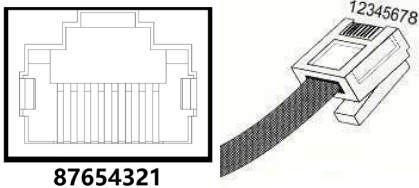Port definitions	RJ45 Pin	Function
	1	BMS_CAN1L
	2	BMS_CAN1H
	3	BMS_CC_GND
	4	BMS_PW_OUT2
	5	BMS_PW_OUT1
	6	BMS_CC_GND
	7	BMS_XUNZOUT-
	8	BMS_XUNZOUT+


5.5.4 Inverter Communication Port (RJ45)

Terminal type: RJ45

Usage: Communicates with inverter.

Before connect inverter with battery by communication cable, users need to check its cable sequence at first. Check the manual of inverter for definition of inverter side.


Definition of battery side as below:

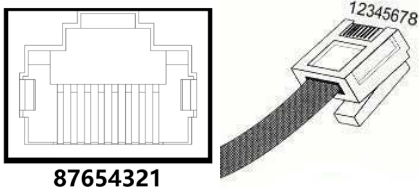Port definitions	RJ45 Pin	Function
	1	RS485_2B
	2	RS485_2A
	3	COM_SGND
	4	WAKEUP+
	5	WAKEUP-
	6	COM_SGND
	7	CAN2H
	8	CAN2L

5.5.5 Debug Port

Terminal type: RJ45

Usage: Debug port of the system which used by technician only.

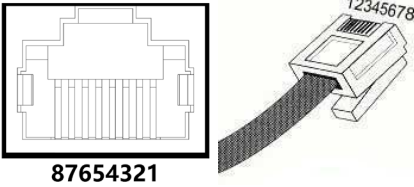









Port definitions	RJ45 Pin	Function
	1	BMS_CAN1L
	2	BMS_CAN1H
	3	BMS_RS232_RX
	4	BMS_CC_GND
	5	BMS_CC_GND
	6	BMS_RS232_TX
	7	IN_CANL
	8	IN_CANH



5.5.6 Inverter Dial Switch

Code 0~26 of this Dial Switch is used to match which brand of inverter is using. (Please refer to Inverter Matching Guide, download from our website:

<https://www.renonpower.com/datasheet.html>)


The definitions of code 0 ~ 26 are shown as below table.

Code	Dial Switch Position	Brand	Logo
0		APP setting (Default: Renon Flex)	
1		RENON	
2		Schneider Gateway	
3		Sol-Ark	
4		Solis	

6		Studer Xtender	
7		Victron	
8		SMA	
9		Sermatec	
10		Sofar	
11		DEYE	
12		Growatt SPF	
13		Growatt SPH	
14		Must	
15		MEGAREVO	
16		SAJ	
17		Aiswei	
18		Phocos	
22		Voltronic Power	
24		Afore	
25		Lux Power	
26		CHISAGE ESS	

5.5.7 Function Dial Switch








The dial switch settings for a single are as below:







Single device	Usage
Code	

5.5.8 Address Dial Switch

- 1) Use this Dial Switch to set the address of each battery and then turn on to activate the system when it needs to be in parallel with other battery units.
- 2) When the system only has one battery, dial the address to 1.
- 3) When the system is used in parallel mode, set the address start from 1, and increase by the number of battery units in order to communicate with other battery.
- 4) Only the battery with address of 1 is able to communicate with the inverter.

The illustration of dialing shown below:

Code	Dial Switch Position	Definition
1		Set as battery 1 (communicate with inverter by this battery)
2		Set as battery 2
3		Set as battery 3
4		Set as battery 4
5		Set as battery 5
6		Set as battery 6
7		Set as battery 7


8		Set as battery 8
9		Set as battery 9
10		Set as battery 10
11		Set as battery 11
12		Set as battery 12
13		Set as battery 13
14		Set as battery 14
15		Set as battery 15

5.5.9 Debug Port (connector)

Terminal type: 6-Pin terminal block

Usage: Debug port of the system which used by technician only.

Defined as below:


6pin Terminal	Pin	Usage
	1	BMS_CAN1H
	2	BMS_CAN1L
	3	IN_CANH
	4	IN_CANL
	5	GND
	6	BMS_POWER

5.5.10 Inverter Communication Port (connector)

Terminal type: 6-Pin terminal block

Usage: Reserved for direct connection with inverter, same function as the RJ45 port (chapter "**Inverter Communication Port (RJ45)**"), only one of these two need to be used, leave it open if not used.

Defined as below:


6pin Terminal	Pin	Usage
	1	RS485_2B
	2	RS485_2A
	3	COM_SGND
	4	CAN2L
	5	CAN2H
	6	COM_SGND

5.5.11 Dry Contact

Terminal type: 6-Pin terminal block

This is for General-purpose input & output (GPIO) which reserved for future communication and used for an uncommitted digital signal pin on an integrated circuit or electronic circuit (e.g. MCUs/MPUs) board which may be used as an input or output, or both, and is controllable by software.

Defined as below:

6pin Terminal	Pin	Usage
	1	BMS_NO1
	2	BMS_COM1
	3	BMS_NO2
	4	BMS_COM2
	5	WAKEUP +
	6	WAKEUP -

















5.5.12 Power Positive & Negative

























Terminal type: Terminal for 70 mm² power cable

Torsion: 12 N.m

5.5.13 Dial Code Switch

If you are using the pin order select box, please refer to the table below to set the dial switch, according to the inverter brand. If the inverter brand is not shown in the table, please refer to the inverter manual or consult Renon's engineer.

Dial switch position		Inverter brand	Comm Mode
 CAN	 RS485	Schneider Gateway	CAN
 CAN	 RS485	Sol-Ark	CAN
 CAN	 RS485	Solis	CAN
 CAN	 RS485	Studer	CAN
 CAN	 RS485	Victron	CAN
 CAN	 RS485	SMA	CAN
 CAN	 RS485	Sermatec	CAN
 CAN	 RS485	Sofar	CAN

 <p>CAN</p>	 <p>RS485</p>	DEYE	CAN
 <p>CAN</p>	 <p>RS485</p>	Growatt SPF	RS485
 <p>CAN</p>	 <p>RS485</p>	Growatt SPH	CAN
 <p>CAN</p>	 <p>RS485</p>	Must	CAN
 <p>CAN</p>	 <p>RS485</p>	MEGAREVO	CAN
 <p>CAN</p>	 <p>RS485</p>	SAJ	CAN
 <p>CAN</p>	 <p>RS485</p>	Aiswei	CAN
 <p>CAN</p>	 <p>RS485</p>	Phocos	RS485
 <p>CAN</p>	 <p>RS485</p>	Voltronic Power	RS485
 <p>CAN</p>	 <p>RS485</p>	Afore	CAN
 <p>CAN</p>	 <p>RS485</p>	Lux Power	CAN
 <p>CAN</p>	 <p>RS485</p>	CHISAGE ESS	CAN

6 Troubleshooting & Maintenance

6.1 Regular Maintenance

- 1) Check the battery modules every 3 months to verify whether there are damages.
- 2) Check the battery modules every 3 months to verify that the operating parameters are normal and there is no abnormal heating.
- 3) Fully charge and discharge the battery system every 3 months.
- 4) Clean the battery modules with a dry rag once a month.

6.2 Troubleshooting

The table given below also helps user to address the failure accurately.

Phenomenon	Possible Causes of Failure
Unable to turn on the battery	1. Try to charge the battery with the activation charging function on the inverter when power is on.
No output after power on	1. Make sure the address dial code setting is correct, refer to the chapter of address dial code. 2. Make sure SOC is not 0%, otherwise charge battery.
Unable to communicate with inverter	1. Make sure the connection of communication cable and power cable is correct, refer to the chapter of connection of cable and power. 2. Make sure the address dial code of the master controller connected to inverter is 1. 3. Make sure the inverter dial code of the master controller connected to inverter is correct, refer to the chapter of inverter dial code. 4. If you are using a pin order select box, please verify that the dialing switch is configured correctly.
Unable to be charged by inverter	1. Make sure power cable connection is correct. 2. Check whether inverter has faults. 3. Check whether grid or PV is available. 4. Make sure Time of Use of the inverter setting is correct. 5. Make sure charging voltage and charging current setting of the inverter match the parameters of the battery. 6. Check the battery low or high temperature protection alarm. 7. Check the over current protection alarm. 8. Make sure the SOC value is below 96% (default value).
Unable to discharge while SOC is not zero.	1. Make sure the connection of cables is correct and circuit breaker is ON. 2. Check whether inverter has faults. 3. Make sure the inverter setting is not in back up mode. 4. Check whether SOC is lower than the shutdown value of the inverter. 5. Check the battery low or high temperature protection alarm. 6. Check the over current protection alarm.

Error or Alarm shown on the screen	<ol style="list-style-type: none"> 1. Check the battery. Refer to the definition of the error or warning codes. If you cannot determine the cause of the error, please contact the installer.
Unable to find the battery on the app or the cloud	<ol style="list-style-type: none"> 1. Make sure the antenna is tightened properly. 2. Make sure the WiFi configuration is correct. 3. Make sure the SSID & PASSWORD of your private is correct, please enter information case-sensitively without space. 4. Make sure the frequency of the WiFi connected to the product is (2.4GHz or 2.4GHz / 5GHz dual frequency integration). 5. Make sure the signal is strong enough. 6. Make sure is working. 7. Make sure installer has added your products to your account. 8. Try to restart the router.

6.3 Status Codes

The following status codes are displayed on the cloud.

6.3.1 Alarm Codes

Code	Warning type	Investigation & troubleshooting
W1	Battery cell undervoltage alarm	<ol style="list-style-type: none"> 1. Low voltage level and needs to be charged.
W2	Charge overcurrent alarm	<ol style="list-style-type: none"> 1. Restore to factory setting; 2. Make sure the inverter setting of max current does not exceed the max charge current of the battery.
W3	Discharge overcurrent alarm	<ol style="list-style-type: none"> 1. Make sure the power of load does not exceed the power of battery.
W4	High charge temp alarm	<ol style="list-style-type: none"> 1. Make sure the battery temperature shown on the inverter or the app is below 55°C, otherwise turn off the battery until the temperature is below 55°C, and then try to charge battery.
W5	High discharge temp alarm	<ol style="list-style-type: none"> 1. Make sure the battery temperature shown on the inverter or the app is below 55°C, otherwise turn off the battery until the temperature is below 55°C, and then try to discharge battery.
W6	Low charge temp alarm	<ol style="list-style-type: none"> 1. Make sure the battery temperature shown on the inverter or the app is above 0°C, otherwise turn off the battery until the temperature is above 0°C, and then try to charge battery.
W7	Low discharge temp alarm	<ol style="list-style-type: none"> 1. Make sure the battery temperature shown on the inverter or the app is above -20°C, otherwise turn off the battery until the temperature is above -20°C, and then try to charge battery.
W8	High ambient temp alarm	<ol style="list-style-type: none"> 1. Make sure the ambient temperature of the battery is below 50°C.

W13	Low total voltage alarm	1. Low voltage level and needs to be charged
W14	Low ambient temp alarm	1. Make sure the ambient temperature of the battery is above -25°C.
W15	High MOS temp alarm	1. Reduce the ambient temperature and restart the battery.
W16	Battery cell overvoltage alarm	1. High voltage level and needs to be discharged.
W17	High total voltage alarm	1. High voltage level and needs to be discharged.
W18	Low SOC alarm	1. Low SOC and needs to be charged.

6.3.2 Error Codes

Code	Error Type	Investigation & troubleshooting
F102	Battery cell fault	1. Restart the battery, and if error code F102 still remains or reappears, contact your installer.
F103	NTC fault	1. Restart the battery, and if error code F103 still remains or reappears, contact your installer.
F104	Current sensor fault	1. Restart the battery, and if error code F104 still remains or reappears, contact your installer.
F106	Short circuit fault	1. Make sure the external connection for both battery and inverters are proper; 2. Disconnect all external connections and restart the battery, and if error code F106 still, contact your installer.
F108	Heating fault	1. Restart the battery, and if error code F108 still remains or reappears, contact your installer.
F111	Charge MOS fault	1. Restart the battery, and if error code F111 still remains or reappears, contact your installer.
F112	Discharge MOS fault	1. Restart the battery, and if error code F112 still remains or reappears, contact your installer.
F131	Pack disconnect fault	1. Restart the battery, and if error code F131 still remains or reappears, contact your installer.
F132	EMS SN is empty	1. Restart the battery, and if error code F132 still remains or reappears, contact your installer.
F135	Pack SN is empty	1. Restart the battery, and if error code F135 still remains or reappears, contact your installer.
F200	Battery cell undervoltage safety lock	1. Restart the battery, and if error code F200 still remains or reappears, contact your installer.
F201	Battery cell high voltage safety lock	1. Restart the battery, and if error code F201 still remains or reappears, contact your installer.
F202	Charge high temp safety lock	1. Restart the battery, and if error code F202 still remains or reappears, contact your installer.
F203	Charge low temp safety lock	1. Restart the battery, and if error code F203 still remains or reappears, contact your installer.

F204	Discharge high temp safety lock	1. Restart the battery, and if error code F204 still remains or reappears, contact your installer.
F205	Discharge low temp safety lock	1. Restart the battery, and if error code F205 still remains or reappears, contact your installer.
F206	Charge overcurrent safety lock	1. Restart the battery, and if error code F206 still remains or reappears, contact your installer.
F207	Discharge overcurrent safety lock	1. Restart the battery, and if error code F207 still remains or reappears, contact your installer.
F300	Total voltage fault	1. Restart the battery, and if error code F300 still remains or reappears, contact your installer.
F301	Temperature difference fault	1. Restart the battery, and if error code F301 still remains or reappears, contact your installer.
F302	Sense resistor fault	1. Restart the battery, and if error code F302 still remains or reappears, contact your installer.
F303	Release status fault	1. Restart the battery, and if error code F303 still remains or reappears, contact your installer.
F304	Release fault	1. Restart the battery, and if error code F304 still remains or reappears, contact your installer.
F305	Master/Slave lost connection fault	1. Restart the battery, and if error code F305 still remains or reappears, contact your installer.
F306	Communication fault	1. Restart the battery, and if error code F306 still remains or reappears, contact your installer.
F307	MCU overvoltage fault	1. Restart the battery, and if error code F307 still remains or reappears, contact your installer.
F308	Current-limiting fault	1. Restart the battery, and if error code F308 still remains or reappears, contact your installer.

6.3.3 Protection Codes

Code	Error Type	Investigation & troubleshooting
P1	Battery cell undervoltage protection	1. Low voltage level and needs to be charged.
P2	Overcurrent charge protection	1. Restore to factory setting; 2. Make sure the inverter's setting of max current does not exceed the max charge current of the battery.
P3	Overcurrent discharge protection	1. Make sure the power of load does not exceed the power of battery.
P4	High charge temp protection	1. Make sure the battery's temperature shown on the inverter or the app is below 52°C, otherwise turn off the battery until the temperature is below 52°C, and then try to charge battery.
P5	High discharge temp protection	1. Make sure the battery's temperature shown on the inverter or the app is below 52°C, otherwise turn off the battery until the temperature is below 52°C, and then try to discharge battery.
P6	Low charge temp protection	1. Make sure the battery's temperature shown on the inverter or the app is above 0°C, otherwise turn off the battery until the temperature is above 0°C, and then try to charge battery.
P7	Low discharge temp protection	1. Make sure the battery's temperature shown on the inverter or the app is above -20°C, otherwise turn off the battery until the temperature is above -20°C, and then try to charge battery.
P8	High ambient temp protection	1. Make sure the ambient temperature of the battery is below 50°C.
P13	Low total voltage protection	1. Low voltage level, and needs to be charged.
P14	Low ambient temp protection	1. Make sure the ambient temperature of the battery is above -25°C.
P15	High MOS temp protection	1. Reduce the ambient temperature, and restart the battery.
P16	Battery cell overvoltage protection	1. High voltage level, and needs to be discharged.
P17	High total voltage protection	1. High voltage level, and needs to be discharged.
P30	High charge temp Protection	1. Make sure the battery's temperature shown on the inverter or the APP is below 52°C, otherwise turn off the battery till the temperature is below 52°C and then try to discharge battery.

P/N: 118.601.00.0114



Renon Power Technology Inc.

5900 Balcones Drive Suite 100, Austin, TX 78731 USA

Renon Power Solutions Sp.z o.o.

ul. ELBLĄSKA 1, 93-459, ŁÓDŹ, POLAND

Renon Power Technology B.V.

Rietbaan 10, 2908 LP Capelle aan den IJssel

Renon Power 株式会社

東京都中央区日本橋箱崎町 20-5 VORT 箱崎 5F



WhatsApp



LinkedIn



Website